

PARTS LIST

XLERATOR® Models

| Ref. # | Stock # | Description – Refer to diagram on reverse side |
|--------|----------|---|
| XL 1 | XL-1064 | Cover - White (includes Nameplate) |
| | XL-1065 | Cover - Chrome (includes Nameplate) |
| | XL-1066 | Cover – Graphite (includes Nameplate) |
| | XL-1067 | Cover - BMC (includes Nameplate) |
| | XL-1068 | Cover – Stainless (includes Nameplate) |
| XL 2 | XL-60 | Nameplate XLERATOR® |
| | XL-61 | Nameplate XLERATOR® - Without Excel Dryer |
| XL 3 | XL-626 | Tamper proof Bolt |
| XL 4 | XL-630 | Tamper proof Wrench |
| XL 5 | XL-62 | Air Outlet Assembly – Nozzle (includes gasket #34 & screws) |
| | XL-62.2 | Air Outlet Assembly – Nozzle 1.1 diameter (includes gasket #34 & screws) |
| XL 6 | XL-40040 | Terminal Block with Screws and Tabs |
| XL 7 | XL-40100 | Control Assembly & Sensor 110/120V (includes XL15 and mounting bracket) |
| | XL-40101 | Control Assembly & Sensor 208/277V (includes XL15 and mounting bracket) |
| XL 8 | XL-40000 | Heating Element Assembly 110/120V (includes gasket and screws) |
| | XL-40001 | Heating Element Assembly 220/240V (includes gasket and screws) |
| | XL-40002 | Heating Element Assembly 208V (includes gasket and screws) |
| XL 9 | XL-40300 | Motor Assembly 120V (includes gaskets & wire harness) |
| | XL-40301 | Motor Assembly 208/240V and 277V (includes gaskets & wire harness) |
| | XL-295 | Motor Brush 110V – Each (including sleeve) |
| | XL-296 | Motor Brush 220V – Each (including sleeve) |
| XL 10 | XL-40400 | Wall Plate Assembly (includes cover mounting brackets) |
| XL 11 | XL-12 | Cover Mounting Brackets - Set of 2 |
| XL 12 | XL-36 | Housing Grommet (rubber) – Set of 4 |
| XL 13 | XL-14 | Housing Retainer – Set of 4 (includes screws) |
| XL 14 | XL-40501 | Recess Kit (for ADA compliance) – No Discount |
| XL 15 | XL-30083 | Optics only (sensor) for Control Assembly |
| | XL-40200 | Blower/Motor Complete 110/120V (includes all except wall plate/cover) |
| | XL-40201 | Blower/Motor Complete 208V (includes all except wall plate/cover) |
| | XL-40202 | Blower/Motor Complete 220/240V (includes all except wall plate/cover) |
| | XL-26 | Air Inlet Cover (includes screws) |
| | XL-29.6 | Fuse (110V only – early versions) 6.25 Amp |
| | XL-29.8 | Fuse Holder (110V only – early versions only) |
| | XL-1400 | XL 110V Sub Assembly on Wall Plate – 1400L for 1.1 Nozzle |
| | XL-1401 | XL 220/240V Sub Assembly on Wall Plate – 1401L for 1.1 Nozzle |
| | XL-1402 | XL 208V Sub Assembly on Wall Plate – 1402L for 1.1 Nozzle |

XLERATOR® Hand Dryer Parts Diagram

