

# TWISTER MANUAL

## OPERATION

- 1) Carefully remove the fan from the bag and the carton.
- 2) Place the fan on a firm, level surface.

**WARNING:** Plastic or rubber tabs like the feet on this unit, may stick to furniture surfaces and/or hardwood floors. The unit may leave a residue that could darken, stain or leave permanent blemishes on the finish of certain furniture surfaces, including wood surfaces and/or hardwood floors.

- 3) Plug the cord set into a 120V ~ electrical outlet. Be sure plug fits tightly in outlet.

- 4) Turn the fan on by selecting the desired speed with the **Power Knob** on the side of the fan. (Figure 1A)


- 0 - Off
- 1 - Low
- 2 - Medium
- 3 - High

- 5) To adjust the vertical angle, move the fan body forward or backward to the desired position. (Figure 1)

### Breaker Reset:

This is a safety feature of your blower fan. When you use a tool that has more amperage than allowed, the breaker will trip. To reset, unplug the tool causing the breaker to trip and push the **Reset Button** adjacent to the outlets on the fan.

- 6) To turn the fan OFF, turn the Power Knob to OFF (0) and unplug the unit from the electrical outlet.

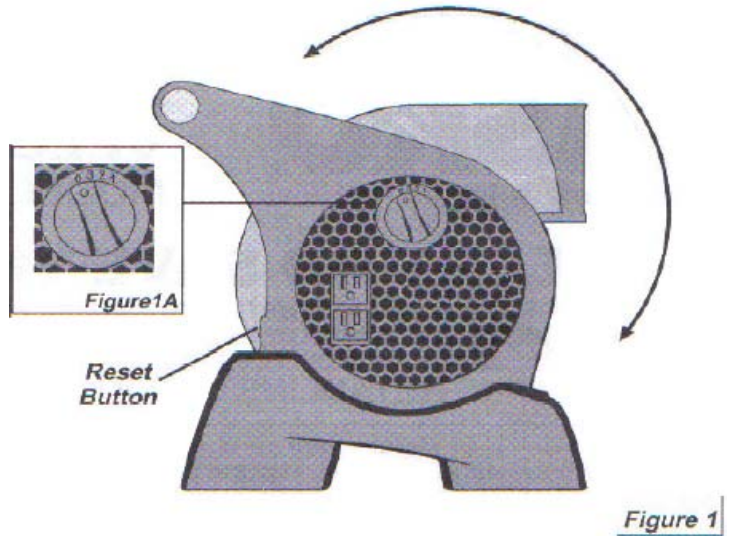

## MAINTENANCE

**WARNING: ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVICING.**

**WARNING: DO NOT IMMERSE FAN IN WATER!**

**CLEANING:** Clean the fan with a vacuum brush attachment on your vacuum cleaner. This will remove dirt and lint that may accumulate over time. **DO NOT ATTEMPT TO TAKE APART FAN.** Clean the body of the fan with a soft cloth.

**CAUTION:** Do not use gasoline, benzine, thinner, harsh cleaners, etc. as they will damage the fan. Never use **ALCOHOL OR SOLVENTS.**

Motor is permanently lubricated.

**Storage:** Store the fan with these instructions in a cool, dry place.