

Maintenance

CLEAN SPRAYER AFTER EACH USE:

1. Rinse tank thoroughly with clean water.
2. Empty tank.
3. Refill tank with clean water.
4. Check pump barrel to be sure no dirt is stuck to barrel.
5. Place pump into tank opening and rotate clockwise until tightly locked and sealed in tank opening.
6. Pump plunger up and down 8-10 strokes.
7. Open shut-off and allow water to run through to clean discharge assembly.
8. Remove pump
9. Empty sprayer
10. REPEAT STEPS 1-9 IF NECESSARY


CAUTION:

DO NOT ATTEMPT TO MODIFY OR REPAIR THIS PRODUCT EXCEPT WITH ORIGINAL MANUFACTURER'S PARTS.

WARNING!


Improper use or failure to follow instructions can result in explosive failure with major injuries. For safe use of this product you must read and follow all instructions before use.

QT-1 Hand Held Sprayer

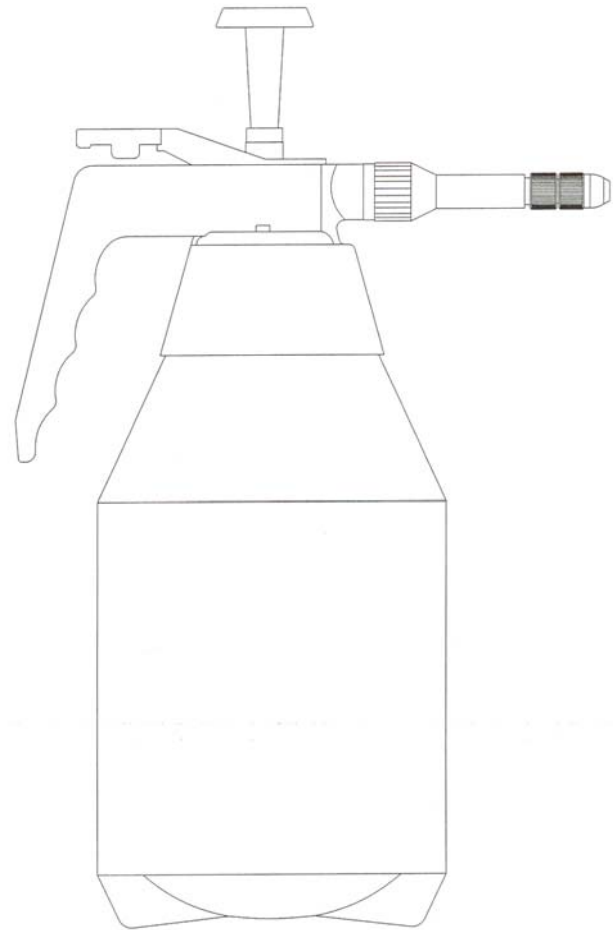

User's Manual

REPAIR PARTS

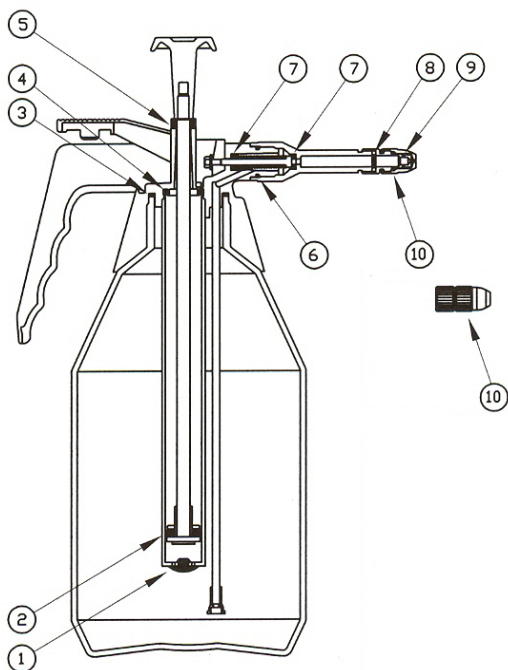

Item	Description	Part Number
	Parts Kit Includes Items 1-9	17017310
1	Check Valve	See Diagram
2	Plunger Cup	See Diagram
3	Pump Tube Gasket	See Diagram
4	Tank Gasket	See Diagram
5	Handle Grommet	See Diagram
6	Connector O Ring	See Diagram
7	Shut Off Gasket	See Diagram
8	Nozzle Gasket	See Diagram
9	Nozzle Gasket	See Diagram
10	Adjustable Nozzle	17017316

CAUTIONS FOR SAFE AND EFFECTIVE USE:

- Read Owner's Manual completely before operating this sprayer
- Always wear safety goggles, gloves, and protective clothing while using this sprayer
- Do not leave sprayer in sun when not in use
- Clean and rinse sprayer after each use
- Always release pressure when sprayer is not in use
- Read and follow all instructions and cautions of chemical manufacturer
- Never store with material in sprayer
- Do not use mechanical devices to pressurize sprayer, this could cause excessive pressure which could cause the tank to explode
- Do not use solutions hotter than 105° F
- Do not use acid in this sprayer

OPERATING INSTRUCTIONS:

1. Inspect interior and exterior of tank for signs of deterioration (i.e. cracks, bubbling and/or pitting) of body and bottom. Any sign of deterioration indicates possible tank weakening and could result in explosive bursting under pressure. If any of these signs are found, DISCARD TANK IMMEDIATELY AND REPLACE.
2. Remove pump by turning counterclockwise allowing residual pressure to escape.
3. Prepare solution following directions on container label.
4. Fill tank with a maximum not to exceed fill capacity of 16 oz.
5. Re-insert pump into tank and tighten securely.
6. Pressurize sprayer with 10 strokes of the pump handle.
7. Point nozzle away from you & depress trigger button to operate.